


## FITTING A **CABLE DUMP KIT** TO A **SOHO** 1650 INTERMEDIATE LEG

### **KIT COMPRISES:**

- 8 M8 thumb screws
- 2 flat panels
- 2 'U' channels

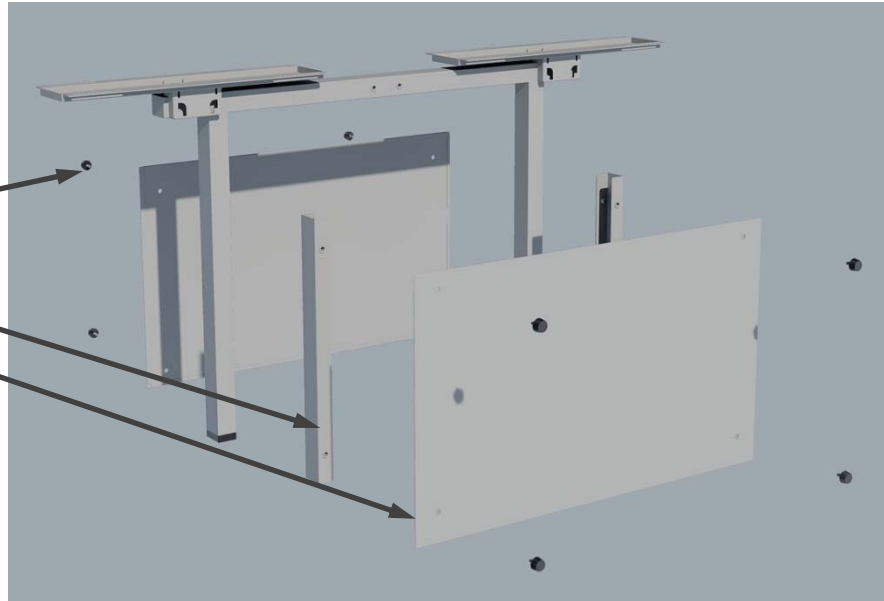

### **HOW TO:**

1. Attach the 2 'U' channels to one of the panels, using 2 thumb screws per channel.
2. Push this assembly into the intermediate leg, between the uprights.
3. Use the remaining 4 thumb screws to attach the second panel to the other side of the leg.
4. The 2 panels will 'clamp' the leg tightly to avoid rattling in use.



*Above image shows the panel fitted to allow cables to be trunked up inside the dump kit. There is a 25mm (approx) gap.*



*One or both panels can be rotated so that the panel meets the bottom of the leg so there is no gap. If there is a gap, but no gap is required, remove the 4 thumbscrews holding the panel on, rotate the panel 180 degrees (turn it 'upside-down'), and refit to the U-channels.*